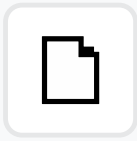 


Start a New Model



control + N

View Help Topics on current window/dialog



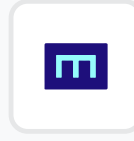
F1

Toggle Loads Display



L

Model Display Options



F2

Toggle Joint Labels



.

Toggle Wireframe and Rendering View



,

Area Load Query



F6

Show Beam Label/Shapes, etc.



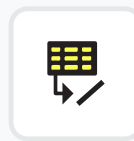
/

Delete Marked Lines



control + D

Select Marked Line in Current View



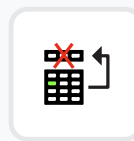
control + S

Insert Line



F3

Delete Line



F4

Find



F5

Sort



F9

Fill Block



control + F

Math on Block



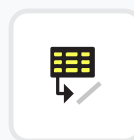
control + M

UnMark All Lines



control + L

UnSelect Marked Line in Current View

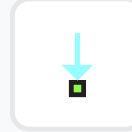


control + U

Draw Area Loads

 shift + A

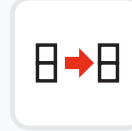
Draw Point Loads

 shift + P

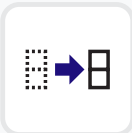
Draw Line Loads

 shift + L

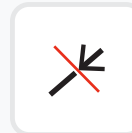
Copy Selected Part of the Model

 N


Move Selected Part of the Model

 M


Trim

 T


Extend

 E

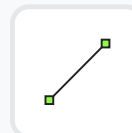
Draw Column

 C


Delete

 delete


Draw Beam

 B

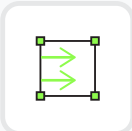
Draw Wall

 W

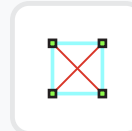
Draw Diaphragm Edge

 D


Draw Infill Beams

 I

Create Slab Opening

 O


Assign Deck

 K

Solve

 F7 or =

Detail Report

 R